

# Printing in Snap Core First: Quick Guide

Printing pages from Snap Core First allows you to create low-tech versions of pages in the software. To print, you must be running version 1.11 or later.

## 1. Open **edit** mode.



## 2. Select the **'Page'** tab.



## 3. Select the **print icon** from the edit menu.




OR


Select **'Print Pages'** from the menu on the left and select **'Print.'**




## 4. On the **'Select Pages to Print'** window, the page that was being used within the software is already selected.

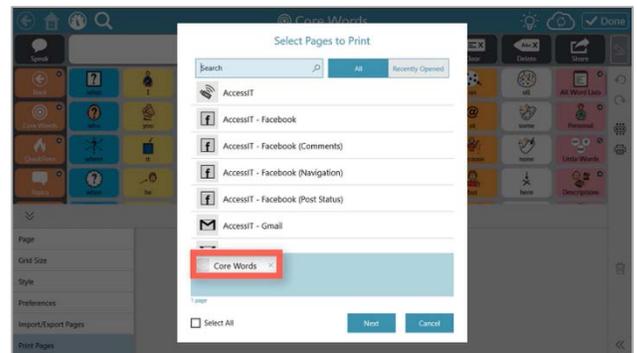


**Search** to add more pages to print.

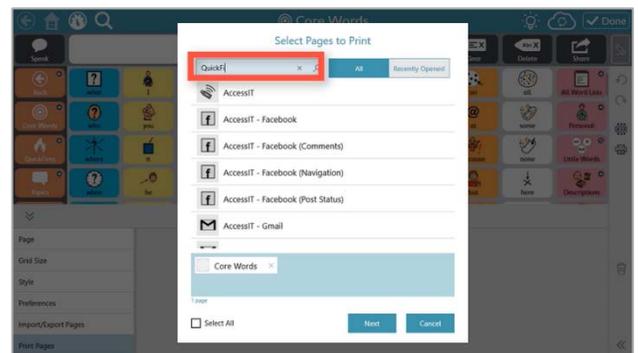


5. Use the **'Select All'** toggle to select all the pages in your search. Use caution when using this feature – checking the box will replace pages that were already selected.

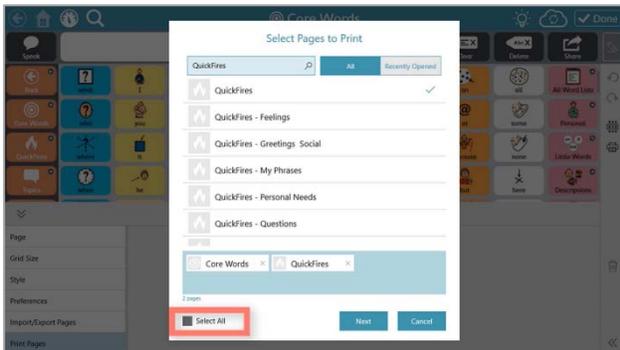


6. Select **'Next'** after all desired pages are selected.

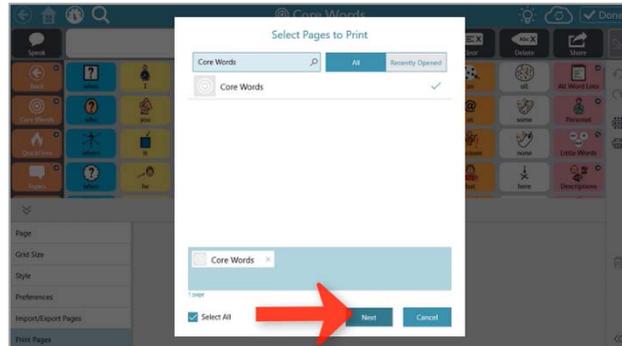


7. On the **'Select Print Options'** window **customize** how the printed page looks by toggling on or off the available options.

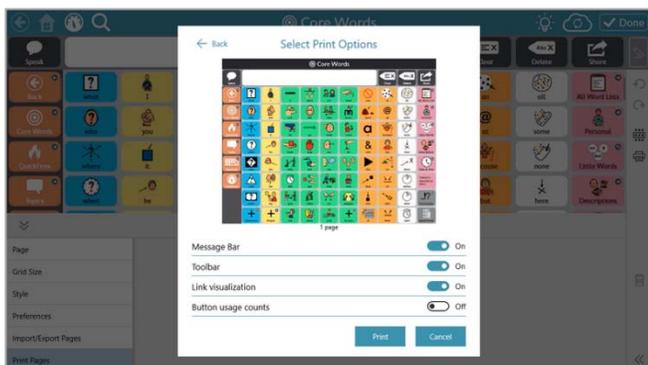

8. This preview **shows how many pages will print**. If pages required scrolling in the software, the preview will show more pages than initially selected.

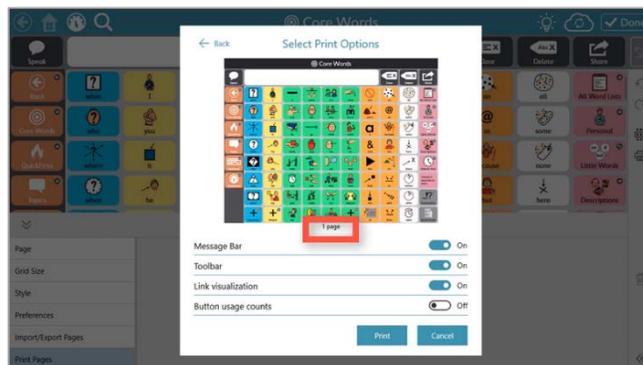

9. Select **'Print'** once desired print options are set.

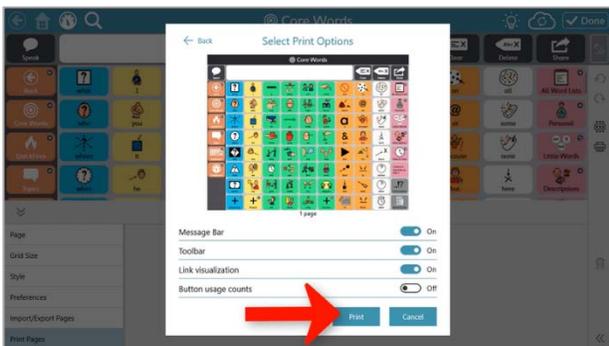

10. The print preview you see next is based on your operating system. Select **'Print'** again and you have a low-tech communication board at your fingertips!

